

Removing Vent Lock

Activate Vent Lock



Use Side Cuts to Grab
Lock Tab



Pull Lock Tab from the
Bottom Up to Remove

