



FIELD INSTRUCTION FOR REPLACING ZAI THRESHOLD CORNER PAD


(INSWING, OUTSWING BUMPER, AND ADA THRESHOLDS)

TOOLS & MATERIALS YOU WILL NEED:

- Rubbing Alcohol
- Clean and Dry Cotton Cloth
- Stiff Putty Knife

Read the following instructions carefully before starting installation. Product warranty does not cover damages resulting from improper installation.


A. REMOVE EXISTING ZAI CORNER PAD(S)

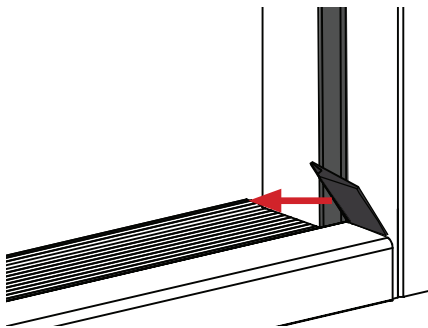

(Figure A.1)


- 1 Grasp a corner of the existing pad and peel back to remove. Remove any remaining adhesive. If the adhesive is difficult to remove, spray a small amount of WD-40 on the area. Be sure to wipe off any overspray or remaining spray from the area as well as the threshold and weather strip to prevent staining.
- 2 Use a lint-free cloth with isopropyl rubbing alcohol to clean the corner pad area. Allow to fully dry.

B. INSTALL NEW ZAI CORNER PAD(S)

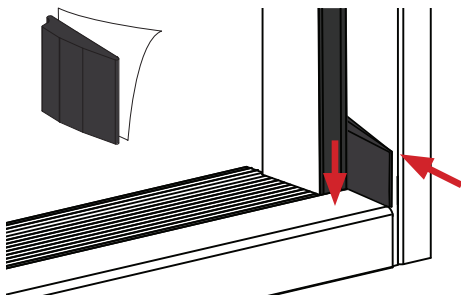

(Figure B.1)

- 1 Remove backing from the new ZAI corner pad to expose adhesive. *Note, pads have a full adhesive backing.*
- 2 Locate the bottom of the weather strip and gently pull back to insert the wide end of the corner pad. The bottom of the pad should sit on top of the threshold. Tuck the pad's guide leg in between the weather strip and the frame stop as shown in Figure B.2. Once located, firmly press in place.

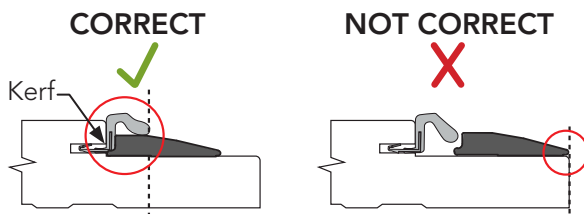

(Figure B.2)

Version 1.1 · 08.13.2025 · © 2025 ProVia · P-MK-61222