



# CASEMENT SCREEN RETROFIT INSTRUCTIONS

## Tools & Materials You Will Need:




- Flat Head Screw Driver or Coin

REMEMBER TO ALWAYS WEAR THE APPROPRIATE




PERSONAL PROTECTIVE EQUIPMENT

- 1 Remove old screen. Remove retainer buttons with a screwdriver. Rotate 180 degrees and re-insert into frame for new screen.

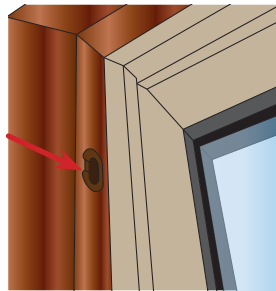


Repositioned Retainer Button

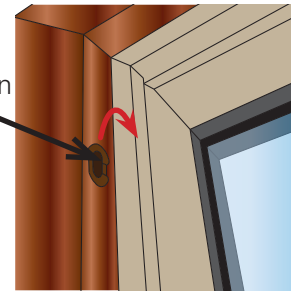


- 2 **Note:** Units with Masterfit trim proceed to step 3.

Rotate sash lock lever so that handle is located on outside of casement screen to allow clearance for new screen. To do so, unscrew two screws from interior of handle, rotate handle, and reinstall screws (see illustration).

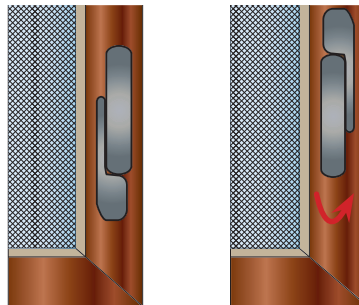

Rear View of Handle Hardware

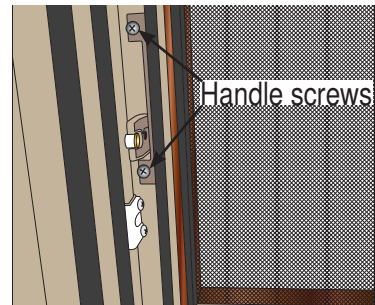

- 3 Insert bottom of screen on window sill. Tilt screen into place.

Tighten retainer buttons to secure new screen by turning clockwise 90 degrees with flat head screwdriver or coin.

