





EMTEK ROUND PREP HOLES HANDLE INSTALLATION INSTRUCTIONS


Door Prep Active Lock

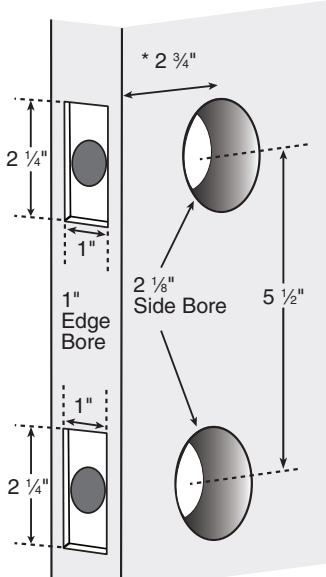


Door Prep Dummy Lock (Double Doors)

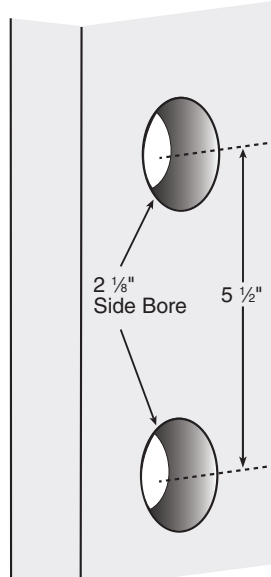

Frame Prep


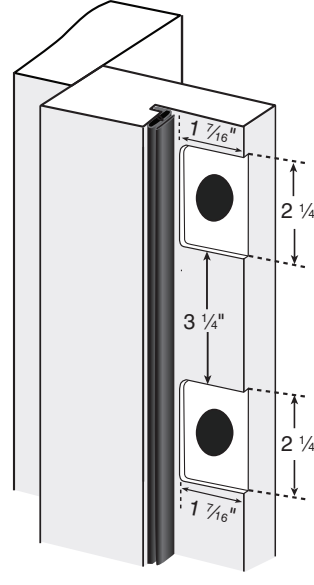


Dust Box & Strike Plates

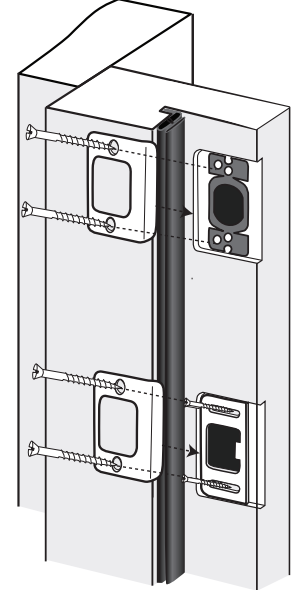


* 2 3/4" is standard, but 2 5/8" will be necessary on doors with narrow stiles.

Outside Handle

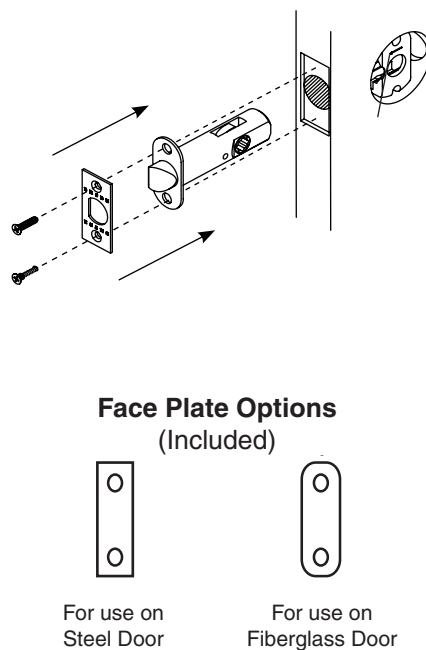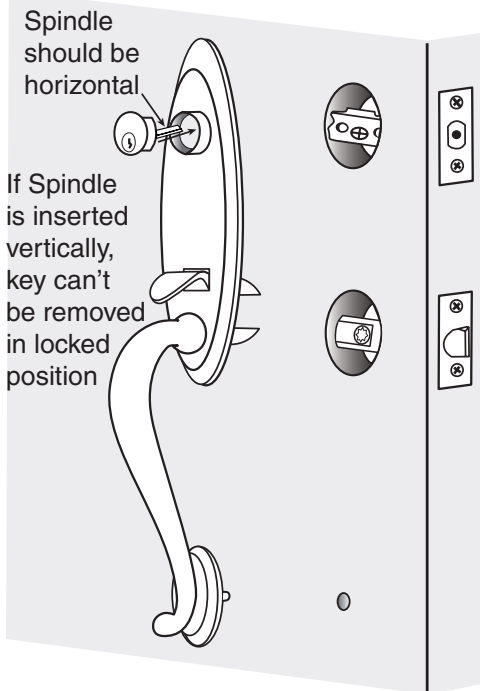

Inside Handle

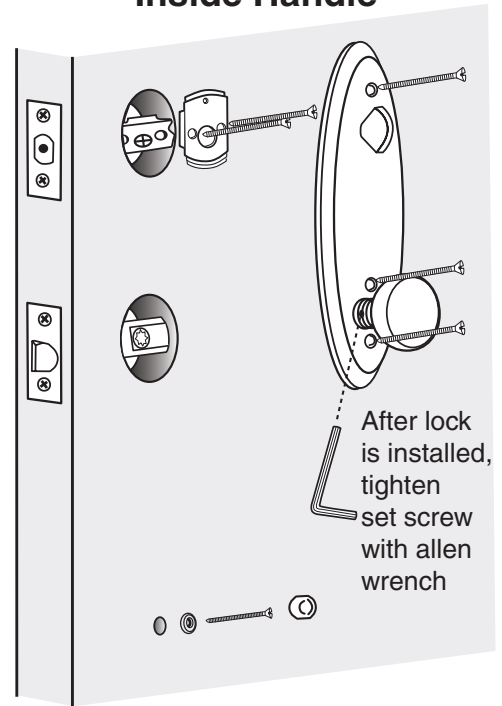

Version 1.6 · 09.18.19 · © 2019 ProVia · P-MK-61025



2150 SR 39 Sugarcreek, OH 44681
330.852.4711 877.735.2057 fax
provia.com