




Instructions to Install Jamb Extensions in Field

REMEMBER: ALWAYS USE THE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT

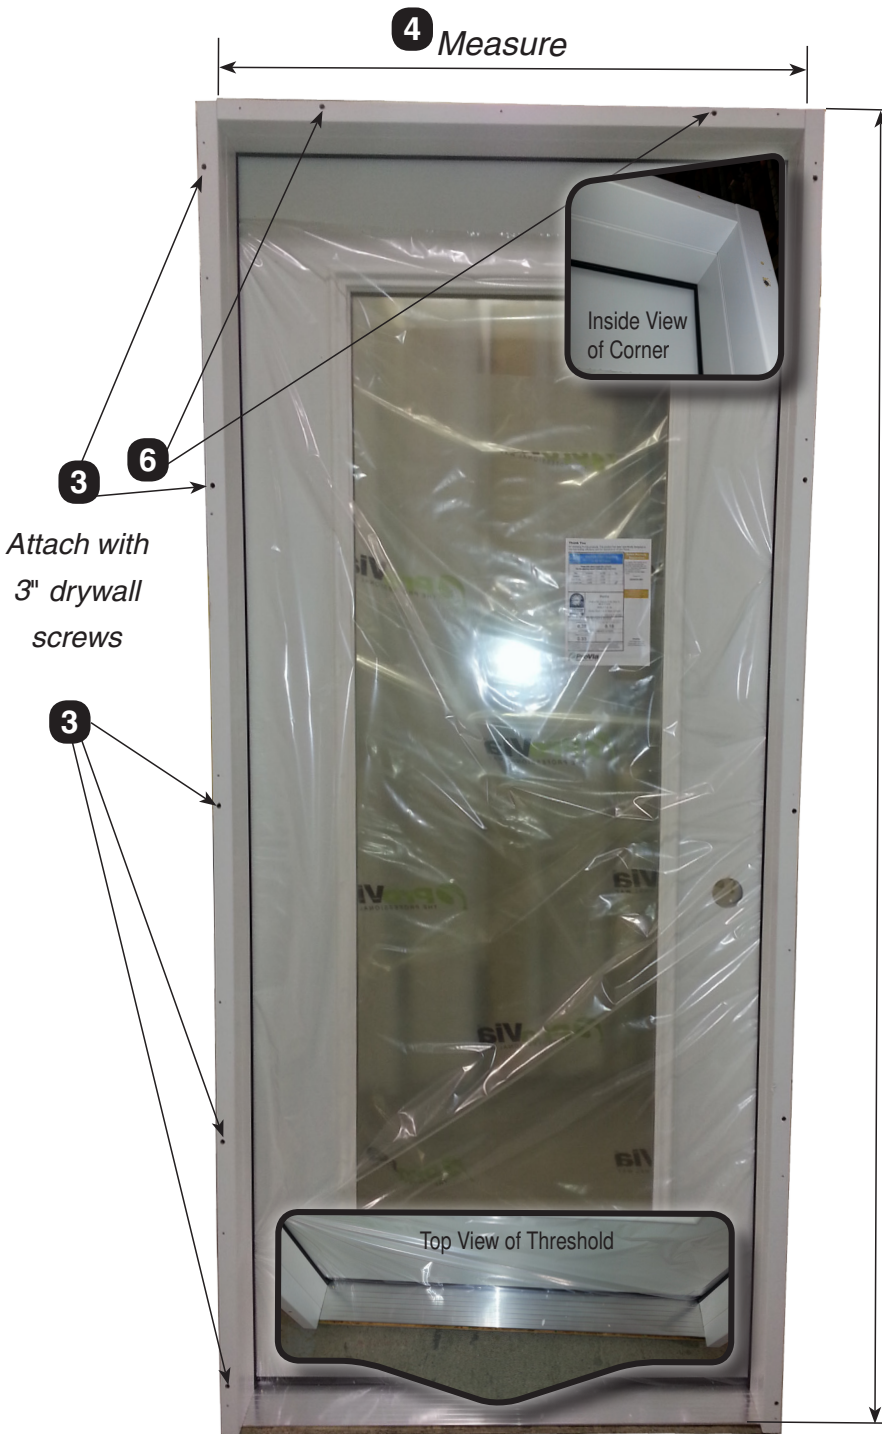

1 Measure from top(outside) edge of frame down to the top of sill on left and right side. Cut jamb extenders to size.

2 Run a bead of glue along face of frame jamb. Place jamb extension on top of glued area. Hold jamb extension in place, making sure you are flush with inside jamb.

3 Attach extension with 5- 3" drywall screws evenly spaced from top to bottom. **Holes should be located about $\frac{3}{8}$ " in from outer edge.** This will ensure the casing will cover the screw holes.

1 Measure

4 Now, measure from inside edge of jamb extension to inside edge of jamb extension and cut header extension to size.

5 Run a bead of glue along face of top frame header and place extension on top of glued area. Hold header extension in place, making sure you are flush with inside jamb.

6 Attach header extension with 2- 3" drywall screws. **Holes should be located about $\frac{3}{8}$ " in from outer edge.** This will ensure the casing will cover the screw holes.